



## Transom Exhaust Connection PV/SV

### Installing the transom exhaust connection

Fit the transom exhaust connection at such a position that with the ship fully laden, the transom connection is still at least 10 cm (4") above the waterline.

In order to install the transom exhaust connection so that it remains watertight, apply marine adhesive sealant between the flange of the transom connection, and the transom.

With the plastic transom exhaust connection TRCxxPV, xx stands for diameters of 40 mm (1 9/16"), 45 mm (1 3/4"), 50 mm (2"), 60 mm (2 3/8"), 75 mm (3") and 90 mm (3 1/2"), the exhaust hose can be fitted directly, without hose connector.

The maximum thickness of the transom at the place where the transom connection is fitted, can be 35 mm (1 3/8") for type TRCxxPV and TRCxxS.

### Dimensions

	ø D mm (inches)	ø A mm (inches)	B mm (inches)	C mm (inches)	E mm (inches)
TRC40PV	40 (1 1/2)	52 (2 1/16)	88 (3 1/2)	28 (1 1/8)	75 (3)
TRC45PV	45 (1 3/4)	52 (2 1/16)	88 (3 1/2)	28 (1 1/8)	75 (3)
TRC50PV	51 (2)	68 (2 11/16)	104 (4)	33 (1 5/16)	75 (3)
TRC60PV	60 (2 3/8)	68 (2 11/16)	104 (4)	33 (1 5/16)	75 (3)
TRC75PV	76 (3)	97 (3 7/8)	140 (5 1/2)	28 (1 1/8)	95 (3 3/4)
TRC90PV	90 (3 1/2)	97 (3 7/8)	140 (5 1/2)	28 (1 1/8)	95 (3 3/4)

	ø D mm (inches)	ø A mm (inches)	B mm (inches)	C mm (inches)	E mm (inches)
TRC40SV	40 (1 1/2)	41 (1 5/8)	74 (3 3/8)	24 (1)	75 (3)
TRC45SV	45 (1 3/4)	46 (1 13/16)	79 (4 1/2)	25 (1)	75 (3)
TRC50SV	51 (2)	51 (2)	84 (4 1/2)	26 (1)	75 (3)
TRC60SV	60 (2 3/8)	61 (2 3/8)	94 (4 1/2)	28 (1 1/8)	75 (3)
TRC75SV	76 (3)	77 (3 1/16)	110 (4 5/16)	30 (1 3/16)	90 (3 9/16)
TRC90SV	90 (3 1/2)	91 (3 9/16)	123 (4 13/16)	33 (1 5/16)	110 (4 5/16)
TRC100SV	102 (4)	103 (4 1/16)	140 (5 1/2)	35 (1 3/8)	115 (4 1/2)
TRC125SV	127 (5)	128 (5 1/16)	169 (6 5/8)	40 (1 1/2)	140 (5 1/2)
TRC150SV	152 (6)	153 (6 1/32)	194 (7 5/8)	45 (1 3/4)	150 (5 7/8)

### Warning

